




INSECT SCIENCE®

The Science of Entomology


HOW TO USE THE STICKY ROLL APPLICATOR

Use the Sticky Roll Applicator to install sticky rolls to monitor and trap insect populations in large areas like greenhouses, nurseries, shade houses, and open fields.

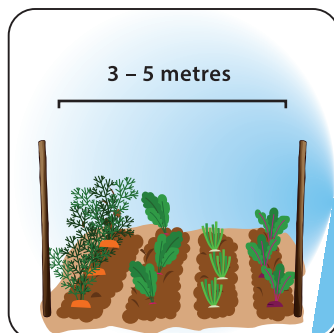


STEP 1

In open fields, install two poles in the ground, 3 – 5 m apart to provide support. This spacing depends on the layout of your garden/nursery. Use existing poles in tunnels and net houses.

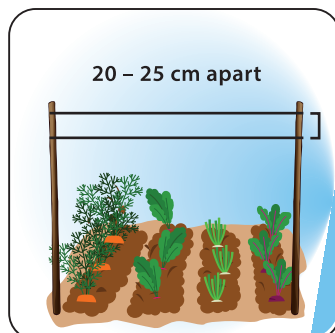


STEP 2

Attach two parallel lengths of wire horizontally between the poles, just above the plants. Wires should be 20 – 25 cm apart.

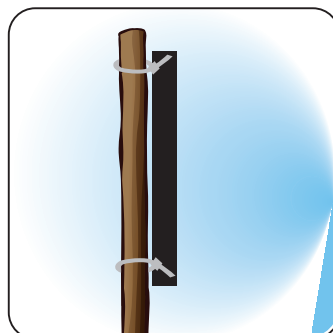


STEP 3A

Application is best performed by two people: one person clamping and cutting, while the other rolls out the sticky roll. Start by attaching one applicator to each pole, facing inwards towards the opposite pole.

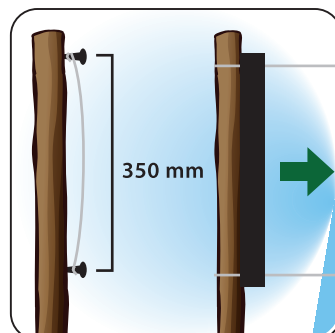


STEP 3B

Secure the applicator to the pole using cable ties (as seen in Step 3A) or by running a wire vertically along the inside of each pole and clipping the applicator onto it.

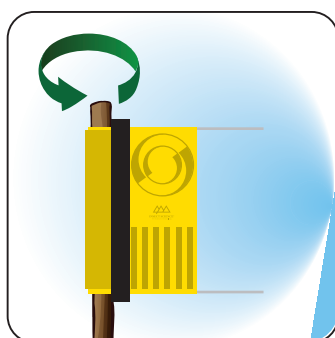

STEP 4

Open the applicator and wrap the sticky roll around the pole and the secured section of the applicator. Pull it tightly and close the applicator. (Note that the first 25 cm of the sticky roll has no adhesive glue.)

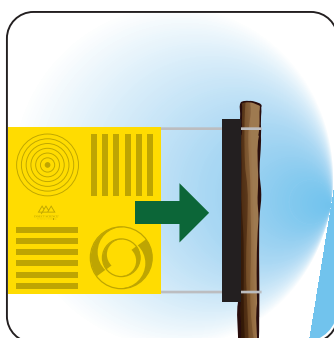

STEP 5

Using the wire as a guide, pull the sticky roll along the wire until you reach the other pole.



STEP 6

Open the applicator and wrap the sticky roll around the pole and the secured section of the applicator. Pull it tightly and close the applicator. Cut the sticky roll.

TIP

Clean any sticky residue off hands using Insect Science® Glue Remover, sold separately. (Available in 1 litre bottles)



ALSO
AVAILABLE FROM
INSECT SCIENCE

COMPONENTS

Each applicator sold on its own.
Sticky rolls sold separately.

Insect Science (Pty) Ltd (Reg. No. 2000/022528/07 • VAT No. 415 019 1890)

Tel +27 (0) 15 065 0199 • E-mail info@insectscience.co.za • www.insectscience.co.za

Private Bag X 4019, PostNet Suite #378, Tzaneen 0850, Republic of South Africa